



Instructions for Connecting / Disconnecting the Optical Module to the Luminous Fabric

1 – How to disconnect an Optical module ?

Pull the battery box out of the pocket where it is held. Then gently pull onto the electrical wires until the optical connector is also extracted from the pocket.

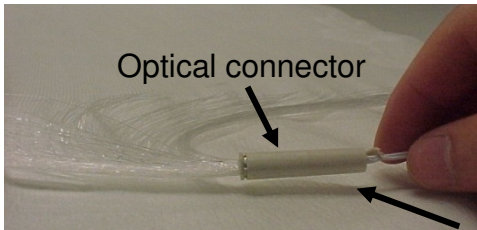


Slide the **external tube** on the optical connector of the optical module, so the external tube is positioned as per photo right ->

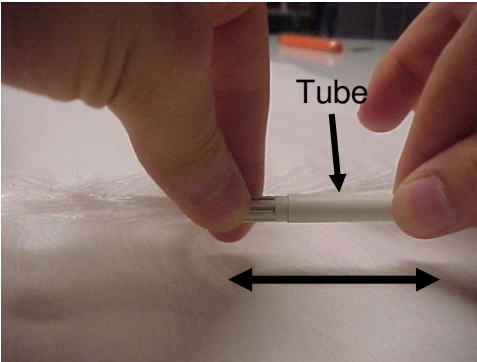


DO NOT completely remove the external tube from the connector assemblage.

Carefully extract the Metallic Optical Connector from the connector assemblage, until the optical module is completely disconnected from the fiber optic bundle.

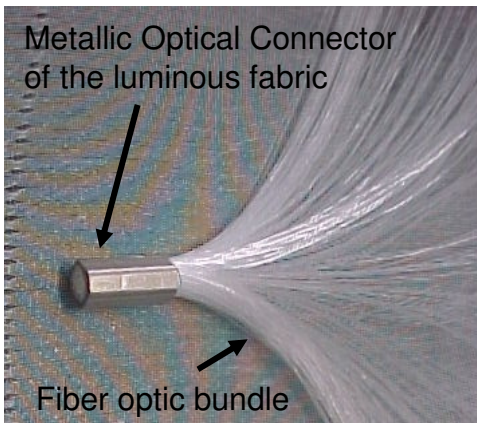



2 – How to connect an Optical module ?

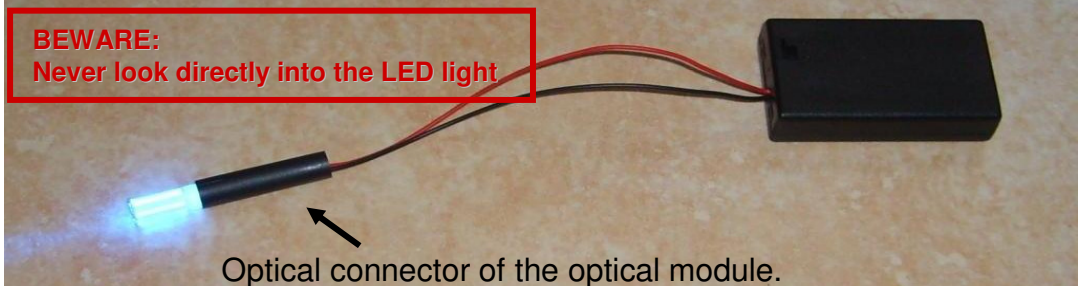

Slide the **external tube** on the optical connector of the optical module, so the external tube is positioned as per photo right ->

DO NOT completely remove the external tube from the connector assemblage.

Get the Metallic Optical Connector of the luminous fabric (for clothes, the connector is hidden into the lining)

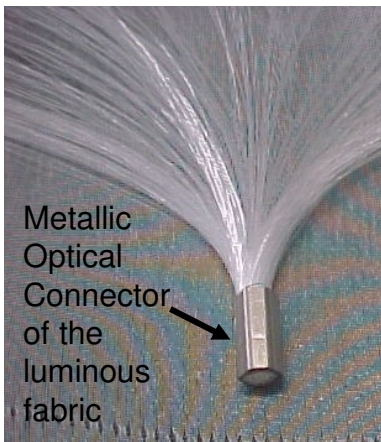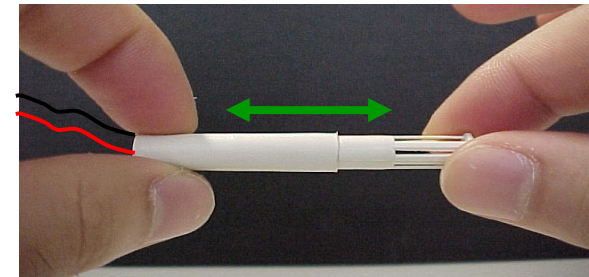

Then insert the Metallic Optical Connector of the luminous fabric into the plastic optical connector of the optical module. Then slide the external tube on the optical connector of the optical module, so the external tube is positioned as per photo right ->

